

### ABOUT SUPER DECODER

Super Decoder is a code-breaking game console for brain challengers. The goal is to break the 4-digit color code within 7 steps from the interactive hints. You can turn yourself to a master from the 500+ leveled up games or set a code that no one can break!

**The Goal: Break the 4 Digit Color Code within 7 Steps!**

**DIRECT HINT**

- The color is correct in the underlying position.
- The color is correct but not in the underlying position.
- The color is incorrect.

**INDIRECT HINT**

- The color is correct in the right position.
- The color is correct in the wrong position.
- The color is incorrect.

### SOLO MODE

100+500 Games!

**QUICK START**

- Select Direct / Indirect hints.
- Turn to Solo Mode.
- Observe the 1st clue and hint.
- Twist to Select Color, short press to change position, long press to enter codes.
- Observe the next clue and hint until you break the code. You only have 6 trails!

### DUO MODE

A game between Code Setter and Code Breaker!

**QUICK START**

- Select Direct / Indirect hints.
- Turn to Duo Mode.
- The Code Setter:
  - Twist to select color, short press to change position, long press to enter codes.
  - Twist to select time, short press to set time.
- The Code Breaker:
  - Twist to select color, short press to change position, long press to enter codes. You only have 7 trails!

### AUTOMATIC OFF

Automatically turn off without operation within 5 minutes. Turn on by turning the tele button.

### SET MUTE

Long press twist button to set mute while playing the clue.

### FAQ

**How to change game under Solo Mode?**  
Short press to preview game while playing the clue, twist to select and short press to enter the game.

**How to view the correct code under the solo mode?**  
It's not available. If fail, short press to retry.

### SPECIFICATIONS

Name: Super Decoder      Model: JKMJ001  
Material: ABS                      Age: 5+

96 mm

402 mm

**NOTES**

1. Never abuse, throw, drop, puncture, violently kick or step on the product. Do not drop the product or throw it. Do not place the product in the fire or near a source of fire. Do not use the product if it has a strong smell or any abnormal heat. If battery leakage occurs, thoroughly wash the affected skin and cloths. Keep battery acid away from your eyes. Do not use the product if you have a fever. Do not use the product if you are pregnant or breastfeeding. Do not use the product if you are allergic to the product. Do not use the product if you are under the influence of alcohol or drugs. Do not use the product if you are taking medication. Do not use the product if you are feeling unwell. Do not use the product if you are feeling dizzy or lightheaded. Do not use the product if you are feeling tired or stressed. Do not use the product if you are feeling nervous or anxious. Do not use the product if you are feeling sad or depressed. Do not use the product if you are feeling angry or frustrated. Do not use the product if you are feeling confused or disoriented. Do not use the product if you are feeling dizzy or lightheaded. Do not use the product if you are feeling tired or stressed. Do not use the product if you are feeling nervous or anxious. Do not use the product if you are feeling sad or depressed. Do not use the product if you are feeling angry or frustrated. Do not use the product if you are feeling confused or disoriented.

**LIMITED WARRANTY**

GIKER warrants that your GIKER hardware products ("the Product") will be free from defects in materials and workmanship for a period of 1 year from the date of purchase ("the Warranty Period"). If a defect in the Product arises under normal and intended use within the Warranty Period, please contact the authorized GIKER dealer in your country. The authorized GIKER dealer in your country will, at its discretion, repair or replace the Product. GIKER does not warrant that the operation of the Product will be uninterrupted or error-free. This Warranty does not apply to: a) Products you purchase from unauthorized dealers or distributors; b) Consumables, such as stickers or protective coatings designed to diminish over time; c) Defects caused by misuse or failure to follow the product directions; d) Defects caused by accidents, neglect, fire, water, lightning, or other acts of nature; e) Normal wear and tear or otherwise due to the normal aging, other cause beyond GIKER's reasonable control.

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE (OR BY COUNTRY OR PROVINCE), OTHER THAN AS PERMITTED BY LAW. GIKER DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU MAY HAVE. FOR A FULL UNDERSTANDING OF YOUR RIGHTS YOU SHOULD CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.**

**DECLARATION OF CONFORMITY**

GIKER Technology Co., Ltd. declares that this product is in compliance with the relevant requirements of Directive 2009/48/EC Directive 2011/65/EU. This declaration of conformity is published on our website [www.giker.com/pages/compliance](http://www.giker.com/pages/compliance).

**FCC STATEMENT**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference that may occur, including interference from radio communications devices. These limits are designed to provide protection from harmful interference in a residential environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, it is the responsibility of the user to install and use the equipment in a manner that will prevent such interference. If you are experiencing interference, you may wish to take the following steps: a) Reorient or relocate the receiving antenna. b) Increase the distance between the equipment and the receiver. c) Plug the equipment into a different outlet. d) Consult the dealer or an experienced radio/TV technician for help.

**SUPER DECODER**

USER MANUAL

Scale 1:1      Unit:mm

切刀 —————  
压线 —————

**审核人员**

项目：关素莹  
认证：莫珊

**通知人员**

李长萃      段玲

**样品**

产品名 ▶ 超级密码机\_说明书（英文版）  
设计于 ▶ 冯锐湛





印刷颜色 ▶ CMYK  
PANTONE 561C  
成品尺寸 ▶ 402X96mm

物料材质 ▶ 128g铜版纸  
特种工艺 ▶ 覆哑膜，风琴折

# DUO MODE

A game between Code Setter and Code Breaker!

## QUICK START

- 1 Select Direct / Indirect hints.
- 2 Turn  to Duo Mode
- 3 The Code Setter:  
Step 1:  
Twist  to select color, short press to change position, long press to enter codes;  
Step 2:  
Twist  to select time, short press to set time.
- 4 The Code Breaker:  
Twist  to Select Color, short press to change position, long press to enter codes. You only have 7 trails!



topology